PROTEC 6500 IN-PANEL CTU INSTALLATION

1. Installation

a. Install CTU on to Protec 6500 Fire Alarm Panel Masterboard using supplied stand-offs (and plastic backing board if required).

2. Data Interface Connection

- a. Connect 5 wire loom (SGD Ribbon) on CTU board C2 connector (cable to the right)
- b. Connect to Protec SGD Relay Board 5 wire loom connector (cable to the right)

3. Mains Power Supply (24v DC)

- a. Connect one end of supplied 2 wire cable in to DC input on CTU
- b. Connect to the 24v DC output on the Protec 6500 Masterboard (OP1 or OP2)

4. Backup CTU Battery (6v 1.3ah)

- a. Connect battery leads in to BATT input on CTU
- b. Attach to 6v 1.3ah battery placed under Masterboard
- c. Note light will momentarily illuminate red when charging or running on battery


5. CTU Aerials

- a. Dual aerials required. Connect aerial flyleads/cables to both the Main and Diversity connectors on the CTU
 - i. <u>Fixed Antenna</u> Install bulkheads at top of panel following '4G LTE Aerial Installation' recommendations (approx. 150-200mm apart). Mount fixed aerials on top of panel vertically using 2x 300mm extension flyleads.
 - ii. <u>Cabled Antenna</u> Run cabling through top of Protec 6500 panel and mount following '4G LTE Aerial Installation' recommendations (approx. 150-200mm apart). Temporarily fix aerials to window ready for commission testing.

6. Commissioning Tests

- a. Comms light illuminates solid green to show CTU is connected to the cellular network
- b. Contact office on 03 341 0464 to test and commission the CTU and complete the connection to Fire & Emergency NZ.

PROTEC 6500 IN-PANEL

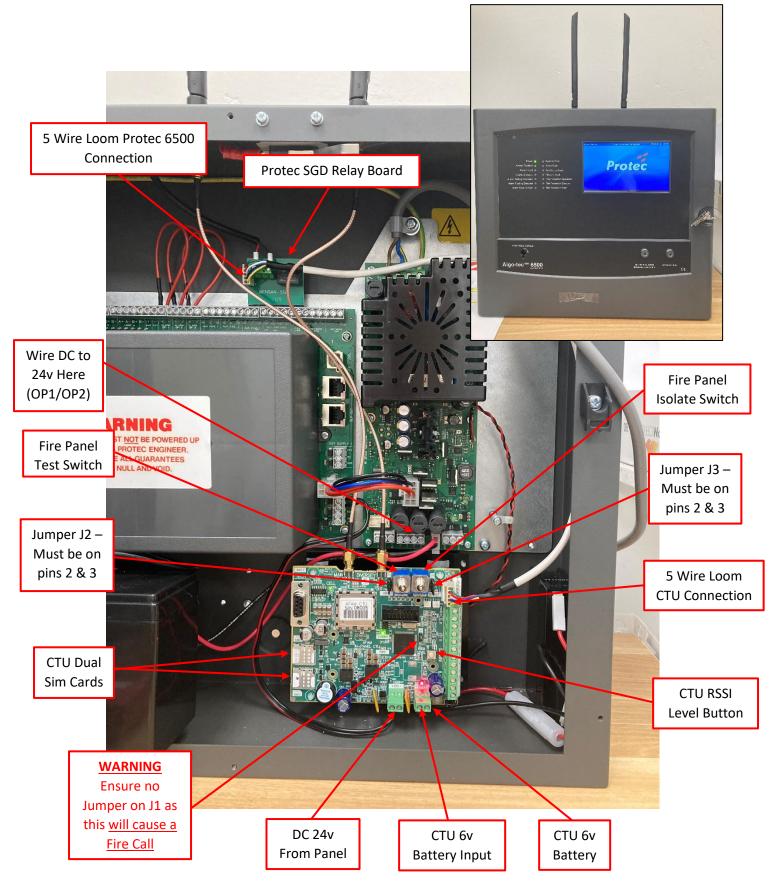

M:\General\Technical Info\Protec\Protec 6500 In Panel Instructions\Protec 6500 In Panel CTU Installation v0.1.docx 16/09/2020